

# Furrow Cruiser Complete & Xtreme Wheel Installation Guide

- **JD 7000/7100 and Kinze Pre-1993** planters with roll pin water pump style bearings require a stud adapter kit and new bolt through style hubs and bearings.
- For **JD 7200/7300** planters you must utilize the stock hubs and bearings and use our Furrow Cruiser Inserts only.
- **JD 7200/7300** planters can only fit one spacer washer in between the wheel and tailpiece so spacing will be approx. 7/8"-1 1/8" between the wheels.



Remove stock closing wheels from the planter.



Use existing spacers and washers provided to space the wheels **1 1/4 inches** apart at the closest point tip to tip of the spikes at the very bottom.

*\*Contour planting setup on back page.*



Install Furrow Cruisers in the back holes of the tailpiece straight across from each other. This set up results in the best firming action and cleaning out in wet planting.

# Furrow Cruiser Complete & Xtreme Wheel Installation Guide



In high contour planting and turning on side hills, install the Furrow Cruisers in the front holes and widen them to approximately **1 ½ inches** apart. This will help in keeping the spike out of the furrow and on the sidewall.



For optimal performance, Furrow Cruisers should be run in pairs.

Spacing wheels at 1 ¼” is an approximate measurement. Be sure to have an equal number of washers on each side to get as close to the measurement as possible. Gap between wheels may need to be adjusted according to planting conditions. Soil conditions vary so you will need to check for seed to soil contact as conditions change.

Down pressure settings are run very similar to stock rubber tire closing wheels. Conventional tillage: 1<sup>st</sup>-2<sup>nd</sup> notch. No till: 3<sup>rd</sup>-4<sup>th</sup> notch. This can vary as conditions change. Dig around the seed to make sure that you can not find any of the “V” from the openers. If you see sidewall, you need another notch of down pressure.

For additional customer support check out [www.copperheadag.com](http://www.copperheadag.com) or call 605-528-3333