



Case IH Conversion Kit- 800, 900 and 1200 Series Installation Guide

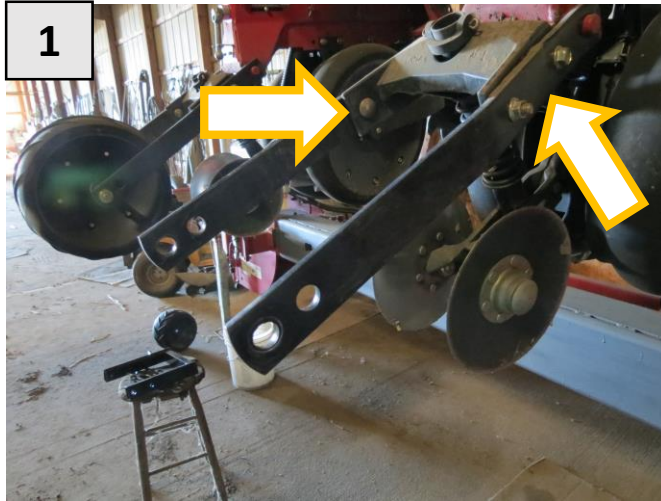


Remove the stock packing wheel. Loosen the 2 bolts on each side of the top of the arm to allow some “play”.
*Retighten after step 4

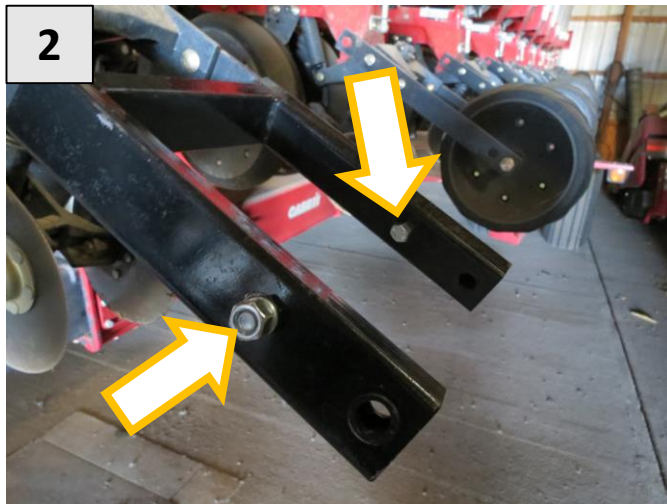

Slide on the bracket. You may need to *tap* with a rubber mallet. Connect bracket with small bolts thru the existing holes in the arms.


For additional customer support check out www.copperheadag.com or call us at 605-528-3333.

Case IH Conversion Kit- 800, 900 and 1200 Series Installation Guide

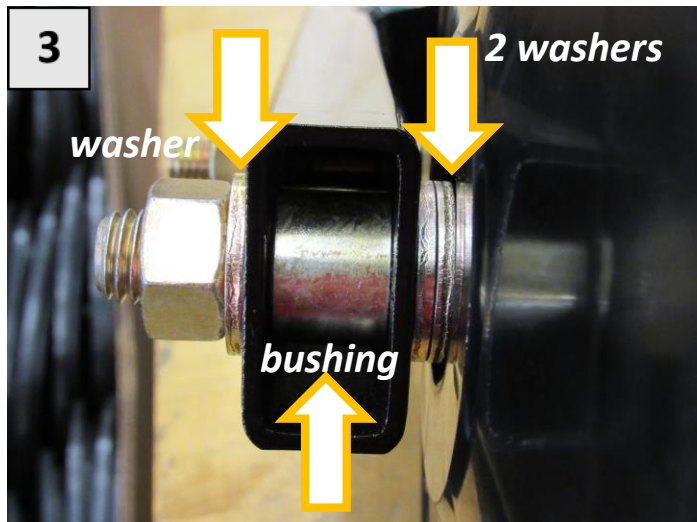

Insert bushings into the bottom of the bracket to help stabilize.

Insert Furrow Cruiser on each side using the right and left handed bolts w/washers and nuts.

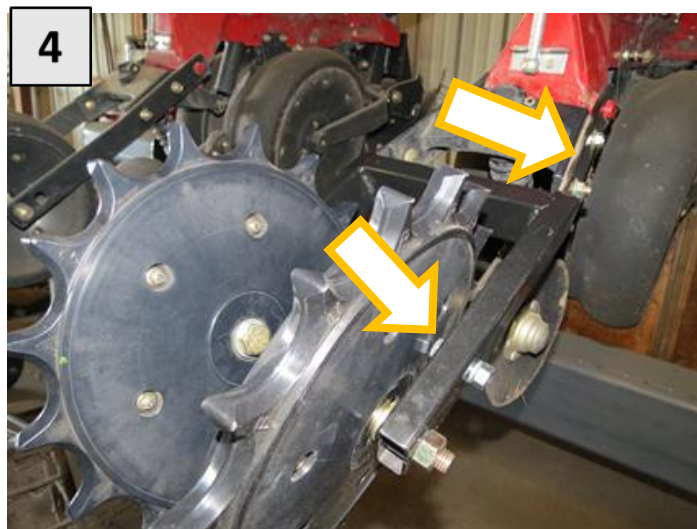

Two washers between the wheel and bracket should create just enough space for the wheel to clear the bracket and small bolts.

Retighten the top 4 bolts on the arm.

For additional customer support check out www.copperheadag.com or call us at 605-528-3333.