

FRONT COVER PLATES

INSTALLING COVER PLATES

1. Attach the “U” bolts to the coverplate using 2 - 13mm lock nuts. Finger tight is fine for now.
2. Attach the latch plates to the concaves in the first, second and third positions using the 10mm bolts. The 3rd plate may be left off if only harvesting corn and soybeans.
3. Attach handles to the latch plate using 13mm bolt and nut. Tighten to snug, but leave room for the handle to move freely.
4. Hook the coverplate over the last bar on the opposite side of the concave and close the latch over the “U” bolt on the near side. Tighten the 13mm nuts down on the “U” bolt until the cover is tight but still allows the latch to pivot out. Insert the pin through the handle plate and close the safety latch.

NOTES


The nuts on the coverplate slides are 1/2”.

If the 2nd section of your Concave does not have the welded bar latch base, use the supplied 2 piece latch base.

WARRANTY DISCLAIMER

Thunderstruck Ag Equipment™ is a distributor of the products we sell and does not provide any direct warranty coverage. All warranty claims and coverage are provided solely by the product's manufacturer, according to their specific terms and conditions.


If you experience a product issue and believe it may be covered under warranty, please contact one of our sales representatives. We're happy to assist you in coordinating your claim with the appropriate manufacturer.

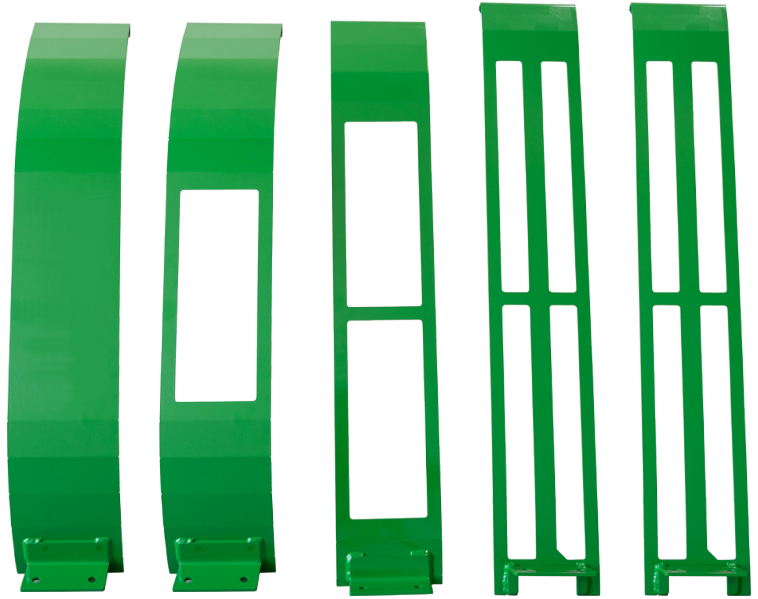

STEP 1 - Coverplate



STEP 2 - Latch Plate

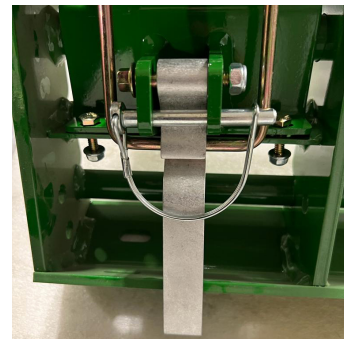

STEP 3 - Coverplates installed