

NOTICE


Do not at any time attach wear insert or remove wear insert from seed firmer while attached to planter. Remove seed firmer while doing maintenance. Beware of all pinch points. Do not backup planter while firmer is down. Always be moving forward when lowering planter.

Liquid Tube Connection Tubes

If you are having issues/leakage with your liquid tube connection to the firmer try the following steps.



Cut end of liquid tube to make a flush end.

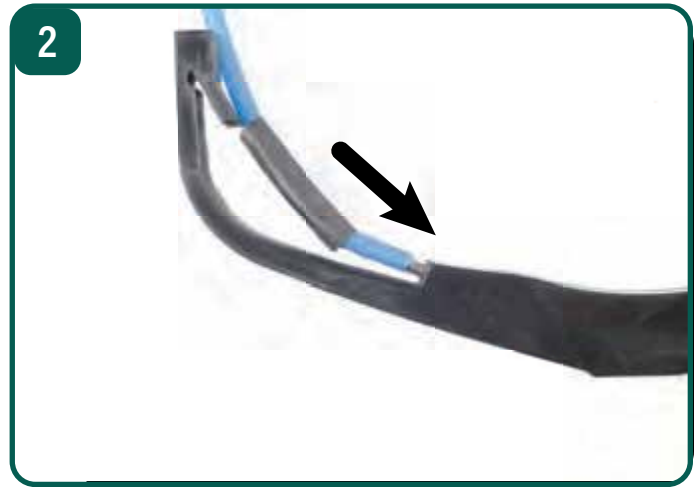

Place electrical 5/16" heat shrink tape on the liquid tube, then firmly attach tube onto firmer.



Finally, pull heat shrink tape down. The tape should be flush with the firmer. Heat as recommended by tape manufacture.